

Cleaning Care for Your Ross Adjustable Drag Reel

CLEANING INSTRUCTIONS FOR ADJUSTABLE DRAG REELS

We recommend that you clean your reel after each use, especially after exposure to a salt or alkali environment.

When cleaning the reel, the drag must be fully disengaged. The Drag Knob must be rotated counterclockwise until the stopping position is reached. Use fresh water to flush salt and debris from the drag system. For better cleaning results, separate the Spool from the Frame, soak in warm fresh water and then rinse in fresh running water. Completely dry the Spool and the Frame before storing the reel.

Solvents should not be used for cleaning the reel.